

Step 1: Remove Battery Door

Use screw driver to loosen screw and remove battery door.



Step 2: Remove Battery

Use a flat head screw driver and place in the top right corner to gently push the battery out. Then, pull the connector to remove.



Step 3: Insert New Battery

Plug the connector on the new battery.



Step 4: Secure Battery Door

Ensure the battery door is properly placed, then screw the battery door back on.

