


# HOW TO SCAN 1D AND 2D BARCODES

Reading distance depends on barcode size, symbology, label media, narrow and wide ratio, and scan angle. Minimum barcode size is 5 mils. Ensure your barcode is correctly formatted, not damaged or poorly printed.

1. Hold your scanner 4-5 inches away and center your beam.

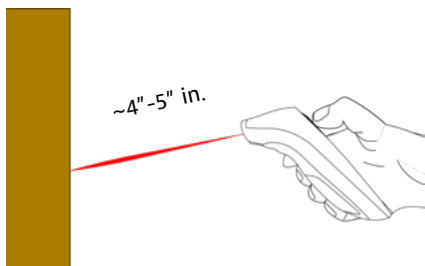

2. Press and hold the scan button to start scanning barcodes.



Practice scanning using sample 1D and 2D barcodes below

