

800 Series Battery Replacement Instructions

 
Step 1: Remove Battery Door

Press the release latch and lift the battery cover.




Step 2: Remove Old Battery

Pull the plastic pull tab to expose the connector on the top right. Then gently pull the connector to remove the old battery.



Step 3: Insert New Battery

Insert the connector back in place. With the adhesive side down, insert the battery and make sure the pull tab is facing out.

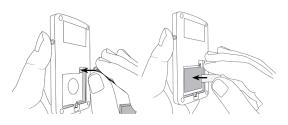

Step 4: Secure Battery Door Replace the battery cover.



09/2021 6430-00416